

The compressor won't run / The unit is not getting down to temperature?

The following procedure should only be attempted by a F-gas trained refrigeration engineer with essential electrics qualifications





